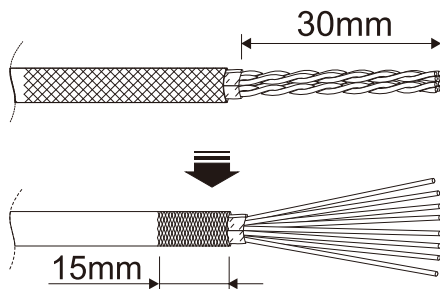



**1**

Remove about 3cm of the cable sheath.  
Keep the cable braid(foil) about 15mm.


**S/FTP****2**

Release the Cap.


Notice that both side of Terminal Plastic are different colors, ensure the white(black) Wire Cap to the same color of white(black) Terminal Plastic.

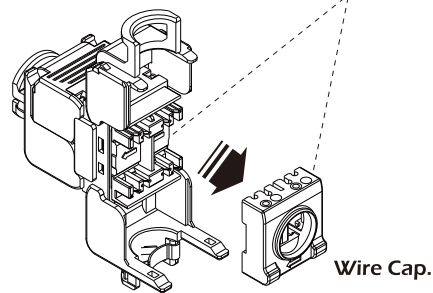**3**


Reeve the cable end through the cap. Seat each colour coded wire in to the matching colour coded cap position. And use wire-cutter to trim off excess wire.

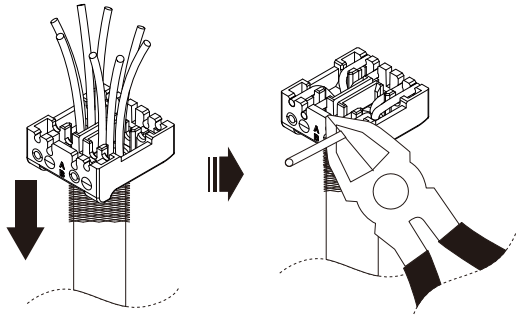**4**

Ensure the arrow on the Wired Cap points in the same direction as the arrow on the Terminal Plastic and cover it with both jaws.

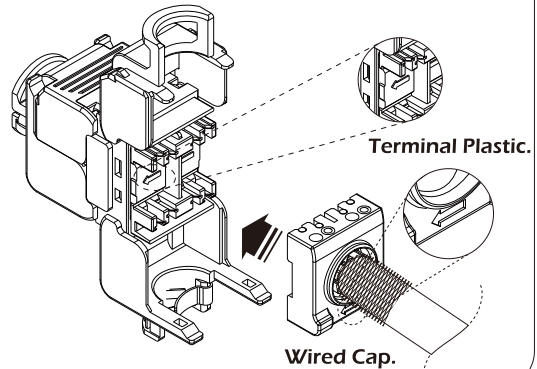
**5**

Thread the supplied cable tie through and then secure the braided shield by tightening it up & cut the cable tie.

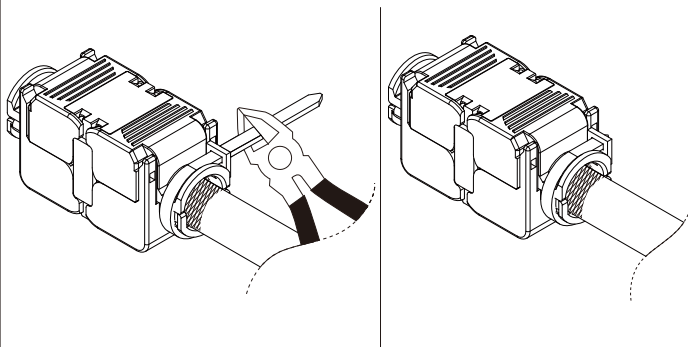

## Disconnection

1. Cut the cable tie.

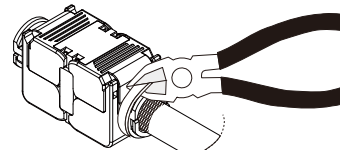

2. Insert a flat screw driver to unlock.

